

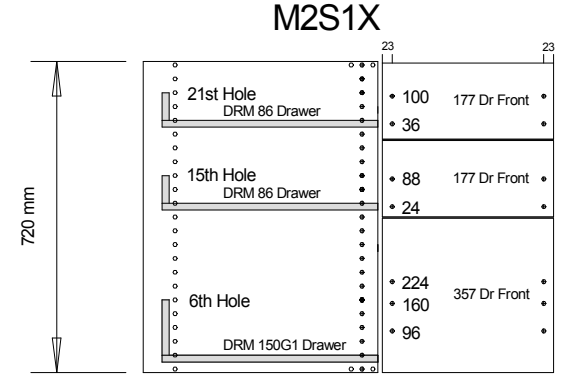
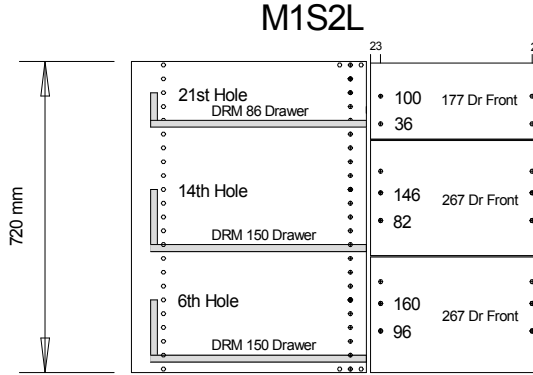
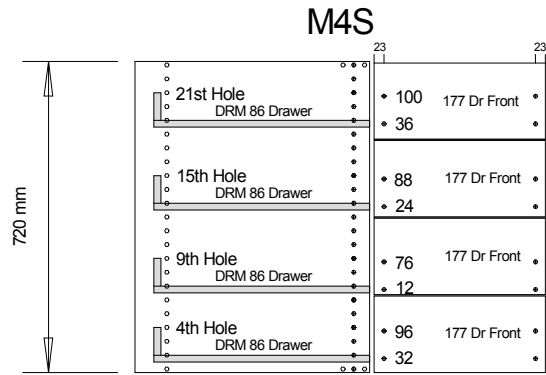
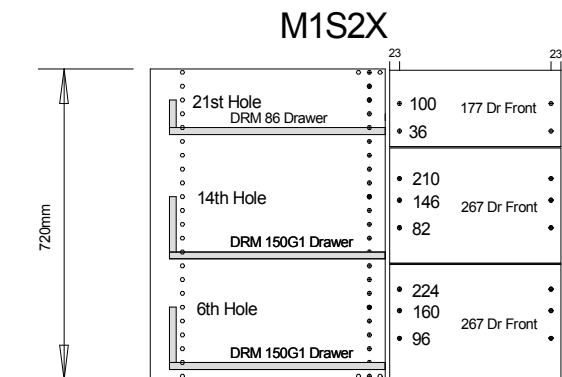
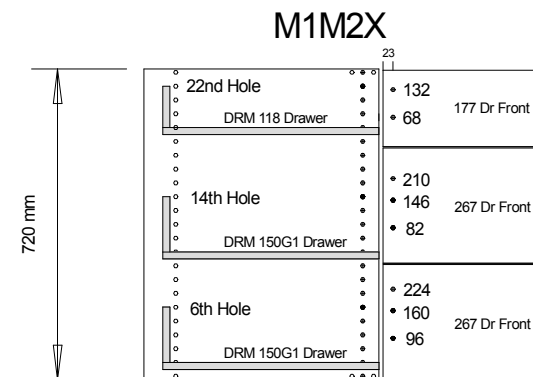
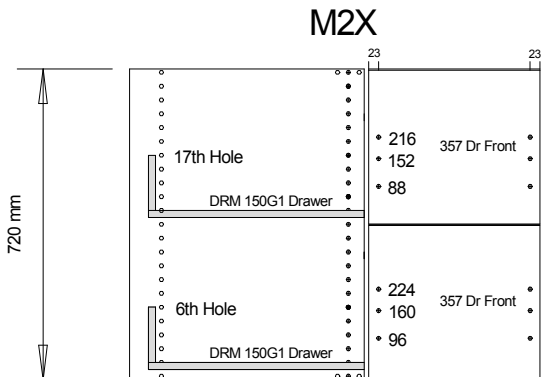
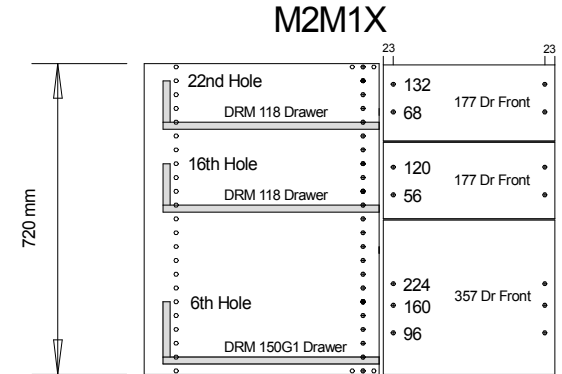


# 720 CARCASS DRAWER SLIDE PLACEMENT

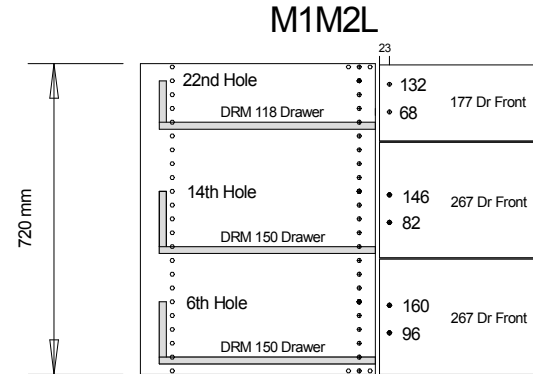

If Carcase is Assembled first hole seen from bottom is hole No 2

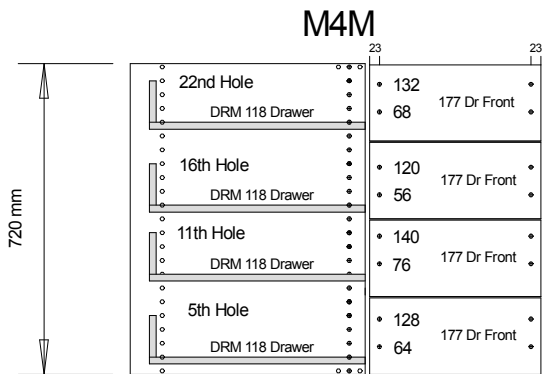

\* Height of drawer fronts based on 3mm gap between Drawer fronts

\* 23mm centres for 10mm holes in drawer fronts based on 1.5mm gap from each end of carcass.



Proform is constantly seeking ways to improve the specification, design & production of its products, and alterations take place occasionally. Whilst every effort is made to produce up to date literature, this instruction sheet should not be regarded as an infalible guide to specifications, we recommend that the prospective purchaser ensures that our catalogue identifies the product displayed or described herein.

Proform Products Pty Ltd Tel:(08)9209 6200 Fax:(08) 9209 6222 Website: [www.proform.com.au](http://www.proform.com.au)