

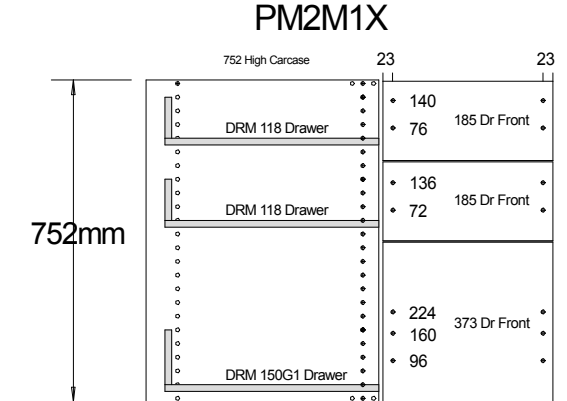
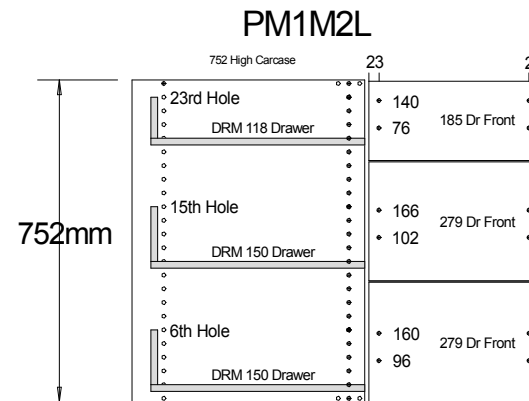
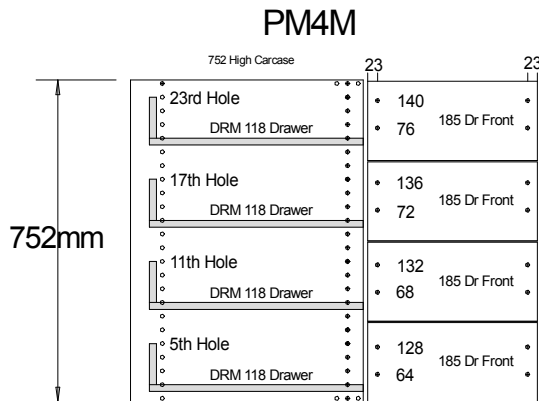
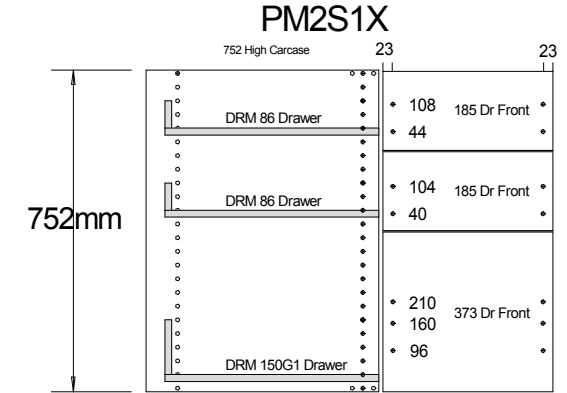
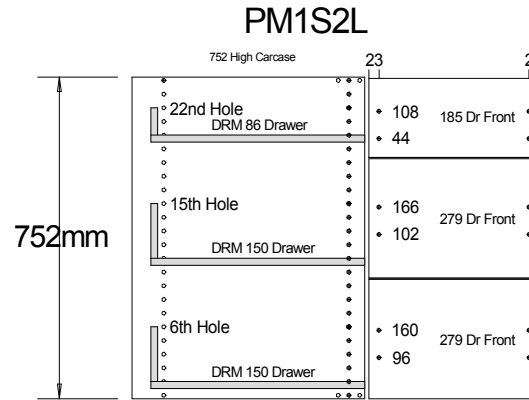
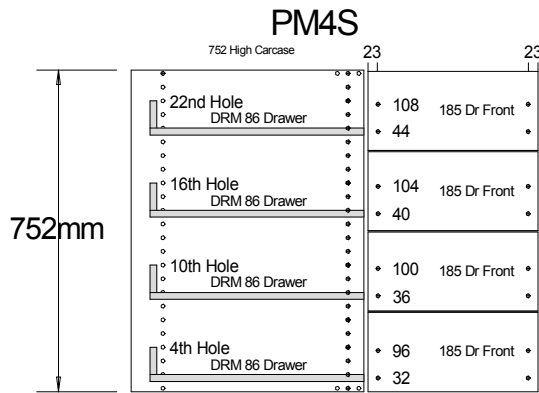
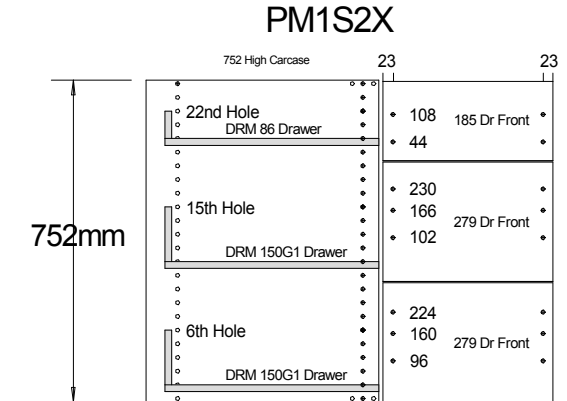


752 CARCASE DRAWER SLIDE PLACEMENT

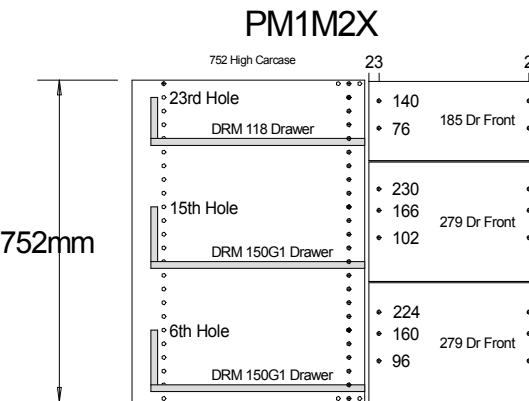

If Carcase is Assembled first hole seen from bottom is hole No 2

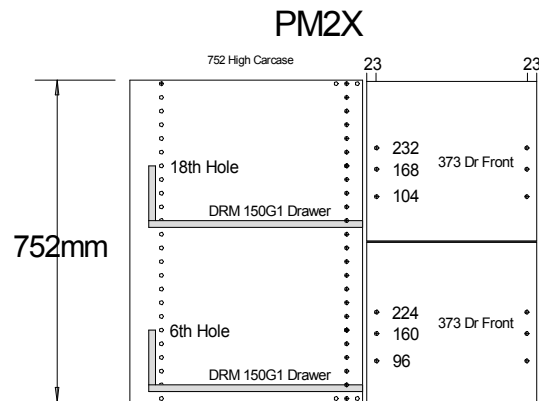

* Height of drawer fronts based on 3mm gap between drawer fronts

* 23mm centres for 10mm holes in drawer fronts based on 1.5mm gap from each end of carcase.



Proform is constantly seeking ways to improve the specification, design & production of its products, and alterations take place occasionally. Whilst every effort is made to produce up to date literature, this instruction sheet should not be regarded as an infallible guide to specifications, we recommend that the prospective purchaser ensures that our catalogue identifies the product displayed or described herein.